

Tricastmedia List of Supported Devices (Version 0.1)

Sr. #	Brand	Lead Device	Supported Devices
1	Nokia	N95	6290,N76,6110,5700,6120,6121,N95,N95 8GB, N81, N81 8G,E51, N82, 6124
2	Nokia	6131	6126, 6133, 6131 NFC, 6233, 6234, 6300, 8600 LUNA
3	Nokia	6500 (Slide)	6500 classic, 7900 Prism, 5610 Xpress Music, 5310 Xpress Music, 6301, 8800 Arte, 3210 Classic
4	Nokia	N71	N73, N75, N92, E50, N77, E65
5	Nokia	6267	7500 Prism, 6555, 6263
6	Nokia	6270	6265, 6265i, 6275
7	Nokia	6280	6282, 6288
8	Nokia	5300	7390, 7373
9	Nokia	7610	6260, 6670
10	Nokia	6680	6681, 6682
11	Nokia	E61	E62, E61
12	Nokia	E70	E60, N80
13	Nokia	N93	N93i
14	Nokia	3250	N91
15	Nokia	N70	N72
16	Nokia	6600	6620
17	Nokia	7370	
18	Nokia	3230	
19	Nokia	6630	
20	Nokia	N90	
21	Nokia	E90	
22	Nokia	7710	
23	Sony Ericsson	K800i	K770x, K790x, K800x,K810x, K818c, S500x, T650x, T658c, W580x, W830x, W850x, W880x, W888c
24	Sony Ericsson	K610i	K530x, K550x, K610x, K618x, V630x, W350x, W380x, W610x, W660x, W710x, Z555x, Z610x, Z710x.
25	Sony Ericsson	K750i	K750x, D750x, K600x, W750x, K758x, W700x, W800x, K608x, V600x
26	Sony Ericsson	W910i	C702x,C902x, K660x, K850x, K858c, W760x, W908c, W910x, W890x, W898c, W980x, Z750x, Z770x
27	Sony Ericsson	W550i	W550x, W600x, Z550x, Z558x, W810x
28	Sony Ericsson	K700i	K700x, Z1010 Z1010(JP-2), S700x, S710x
29	Sony Ericsson	V800i	Vodafone V802SE, Z800x, Z800i
30	Sony Ericsson	K630i	K630x, V640x

31	Sony Ericsson	W900i	W900x
32	Sony Ericsson	P990i	P990x
33	Sony Ericsson	M600i	M600x
34	Sony Ericsson	W950i	W950x
35	Sony Ericsson	W960i	W960
36	Sony Ericsson	P1i	P1x

Brand	Number of Lead sets	Number of Supported Devices	Grand Total
Nokia	22	54	76
Sony Ericsson	14	63	77
Total	36	117	153

Note: x stands for i (Europe), or c (China) or a (Americas)